


ICOM IC-F3162 PROGRAMMING

THE ICOM IC-F3162 VHF TRANSCEIVER DOES HAVE THE POSSIBILITY TO CHANGE SEVERAL STANDARD FUNCTIONS WITHOUT USING THE PROGRAMMING SOFTWARE.
FOLLOWING FUNCTIONS CAN CHANGED IN THE STANDARD PROGRAMMING.

1. RX (RECEIVE) FREQUENCY
2. TX (TRANSMIT) FREQUENCY
3. CTCSS TX (SUB AUDIO TONE TRANSMIT)
4. CTCSS RX (SUB AUDIO TONE RECEIVE)
5. CHANGE TEXT
6. DELETE OR ACTIVATE A CHANNEL

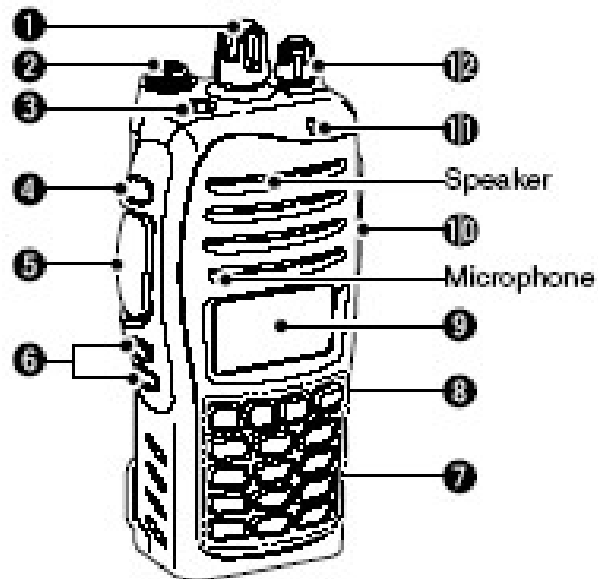

FIRST STEP IS TO COME IN THE DEALER MODE.

SWITCH RADIO OFF

- SWITCH RADIO ON WHILE PUSHING **KEY 4 (see picture) AND P0**
- DISPLAY SHOWS NOW **DEALER**

DEALER

NOW PRESS DEALER PASS WORTH

- 2 5 8 4 5 6
- DISPLAY SHOWS NOW **SETMODE**

SETMODE

- PRESS P0

YOU CAN SCROLL THROUGH THE FOLLOWING MENU FUNCTIONS WITH THE UPPER AND LOWER **KEY 6** (see picture):

- TEXT (CHANGING TEXT IN DISPLAY)
- ZO001 ACTIVATE OR DELETE CHANNEL
- RX FREQUENCY
- TX FREQUENCY
- RX CTCSS (SUB AUDIO TONE RECEIVE)
- TX CTCSS (SUB AUDIO TONE TRANSMIT)

HOW TO CHANGE TEXT

- GO WITH UP OR DOWN BUTTOM TO TEXT
- PRESS **P3**
- NOW YOU SEE FLASHING A DIGIT IN YOUR DISPLAY
- BY PUSHING THE UP OR DOWN BUTTON YOU CAN CHANGE THE DIGIT
- PUSH **P3** FOR THE NEXT DIGIT (SAME PROCEDURE)
- WHEN FINISHED KEEP PUSHING **P3** TILL THERE IS NO FLASH IN THE DISPLAY ANYMORE
- ALSO YOU HERE A LONGER BEEP WHEN FINISHED

TEXT
CH01

HOW TO CHANGE RX CTCSS (SUB AUDIO TONE TRANSMIT)

- GO WITH UP OR DOWN KEY TO RX CTCSS
- PRESS **P2**
- NOW DISPLAY SHOWS A TEXT OFF OR A FREQUENCY (BETWEEN 67.0 AND 250.0 HZ)
- BY PUSHING **P2** YOU CAN ACTIVATE THE CTCSS (ACTIVE OR OFF)
- WHEN ON, YOU CAN PUSH P3 FOR CHANGING THE CTCSS CODE
- CHANGE THE CTCSS FREQUENCY BY THE UP OR DOWN KEY
- WHEN FINISHED, PRESS **P3**

RX CTCSS
67.0 HZ

HOW TO CHANGE TX CTCSS (SUB AUDIO TONE RECEIVE)

- GO WITH UP OR DOWN KEY TO TX CTCSS
- PRESS **P2**
- NOW DISPLAY SHOWS A TEXT OFF OR A FREQUENCY (BETWEEN 67.0 AND 250 HZ)
- BY PUSHING **P2** YOU CAN ACTIVATE THE CTCSS (ACTIVE OR OFF)
- WHEN ON, YOU CAN PUSH **P3** FOR CHANGING THE CTCSS CODE
- CHANGE THE CTCSS FREQUENCY BY THE UP OR DOWN KEY
- WHEN FINISHED, PRESS **P3**

TX CTCSS 67.0 HZ

HOW TO CHANGE THE RX FREQUENCY.

- GO WITH UP OR DOWN KEY TO RX FREQUENCY WIDE
- PUSH **P3**
- NOW THE FIRST DIGIT START FLASHING
- ENTER WITH THE UP OR DOWN KEY THE CORRECT FIGURE
- WHEN OK PRESS **P3**
- CONTINUE THIS , TILL THE COMPLETE CORRECT FREQUENCY IS IN THE DISPLAY
- PRESS **P3** TILL NO DIGIT IS FLASHING ANYMORE , ALSO YOU HERE A LONGER BEEP

RX FREQ WIDE 156.000000

HOW TO CHANGE THE TX FREQUENCY.

- GO WITH UP OR DOWN KEY TO TX FREQUENCY
- PRESS **P2**
- NOW THE FIRST DIGIT START FLASHING
- ENTER WITH THE UP OR DOWN KEY THE CORRECT FIGURE
- WHEN OK PRESS **P3**
- CONTINUE THIS, TILL THE COMPLETE CORRECT FREQUENCY IN THE DISPLAY
- PRESS **P3** TILL NO DIGIT IS FLASHING ANYMORE, ALSO YOU HERE A LONGER BEEP

TX FREQ 156.500000

HOW TO ADD OR DELETE A CHANNEL IN THE PROGRAMMING LIST.

- GO WITH UP OR DOWN KEY TO ZO001
- PRESS **P3** AND SCROLL WITH UP OR DOWN KEY TO THE CORRECT CHANNEL
- PRESS **P3**
- PRESS **P2** TO ACTIVATE OR DEACTIVATE THE CHANNEL

ZO001 CH-001

WHEN FINISHED ONE OF THE ABOVE PROCEDURES SWITCH OFF THE RADIO.

SWITCH ON THE RADIO AGAIN, TO COME BACK IN USER MODE.